



14 0105

**Electr. Digital
Measuring Tape**
Operation Manual



Funktionen:

1. Battery drawer

Herausziehen um Batterie zu wechseln

2. HOLD...X-M

HOLD: Press shortly. Hold or free the measurement. In hold situation, „H“ is displayed. X-M: Press and hold 1 s. Turn into „H“ situation, save the measurement to memory and display „M“ „H“.

M+ ...M+

M+: Press shortly. Change outside or inside measuring mode and reverse LCD figures orderly: outside measuring – inside measuring – outside measuring. LCD figures in opposite view – inside measuring, LCD in opposite view. Add case length 7.6 cm in inside measuring mode.

M+: Press and hold 1 s. Turn into „H“ situation, add measurement to memory and display „M“ „H“ . Press shortly in „H“ situation. Result is same as above.

3. UNIT...MR

UNIT: Press shortly. Convert unit orderly: cm – ft and inch – inch – decimal inch.

MR: Press and hold 1 s. Turn into „H“ situation, recall the data in memory and display „M“ „H“ . Press shortly in „H“ situation. Recall the memory data („M“ „H“) or the hold data („M“ „H“).

4. 0...0

0: Press shortly. Power switch. Automatic shutoff after 6 minutes of inactivity.

0: Press and hold 1 s. Set zero in free situation

In „H“ situation, clear the memory and „M“ disappear, display „H“

IMPORTANT

- Don't retract blade too fast otherwise the measurement may be wrong or the tape may be damaged even hurt people.
- Blade must be retracted fully when change battery or display „E--0“.
- Change battery when display blurredly or display .
- Don't pull out blade fully otherwise the tape may be damaged.
- Don't use buttons when blade moving otherwise the measurement may be wrong.
- Keep the blade clearly and dry.
- Clearing sensor: stick a 1.2 x 2.5 cm bi-sided adhesive tape between scale 3-7 cm on the blade. Pull the blade forth and back several times, the tape will bring dirt out. Take off the tape after cleaning.

Fehlerbehebung

Error message	Reasons	Corrective action
Display	1. Voltage of battery has dropped 2. Suffer from strong interfere	1. Replace battery 2. Turn off the power and turn on it again
Flash	Blade moves to fast	Move the blade smoothly
Display after change battery	Sensor is dirty	Use double sided tape cleaning sensor
Display „E--0“	Blade not be retracted fully	Retract the blade fully
Display „E--8“	Blade is pulled out too much	Retract the blade
Buttons and display are dead	Suffer from strong interfere or crash	Take out the battery and insert it again



Please note:

Please prepare measuring very carefully. The device should be regularly cleaned with cotton-cloth. Do not use petrol. Do not expose the device direct to the sun light, ultraviolet rays or extreme temperatures. Prevent it from any shock and do not immerse the device in any liquid. For maintenance we recommend maintenance tissues art.-no. 35 0321.

Electric etching or engraving by high voltage can destroy the electronic chip, no guarantee will be given!

Never dismantle the instrument housing. The battery should be taken out, if no use for a long time.

Do not give used batteries in refuse. Please give it to a special collecting depot.

Declaration of conformity and confirmation of traceability

We declare under our sole responsibility that this product is in conformity with standards and technical data as specified in our sales documents (operation instructions, leaflet and catalogue).

We certify that the measuring equipment used to check this product, and guaranteed by our Quality Assurance, refers to national standards. Thank you very much for your confidence in purchasing this product.



